


# UPS & FAN CONNECTION




Disconnect the battery and mains power before starting installation.



1. Puncture the rubber grommet nearest to the plug on the UPS. Feed the crimped end of the wires through the grommet.

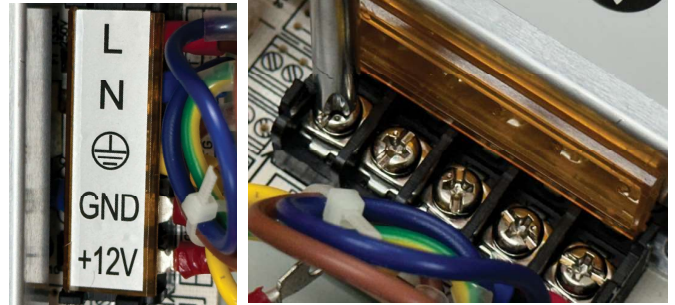

2. Pop open the wire cover. Loosen the two screws for +12V and GND.

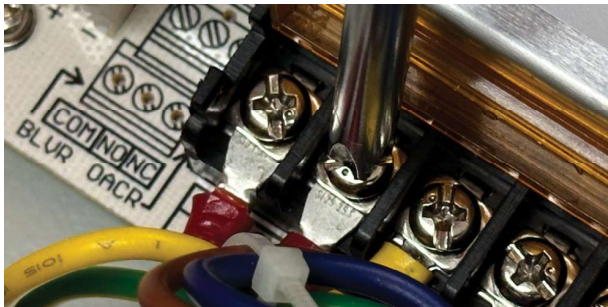

3. Connect the **black crimp wire** to the **GND terminal**.

Connect the **Red crimp wire** to **+12V terminal**. (**note: do not refer to crimp colour please use wire colour**)



4. Connect **black battery cable** to the **negative terminal** on the battery.

Connect the **red battery cable** to the **positive terminal** on the battery.



5. Plug in the fan and solar cable via IP rated connector and screw the joining cap to secure.



The fan should start to run if the battery is charged. The indicator lights on the front of the UPS should be active depending on the power source (mains power or DC 12V).

IMEL-02-2025-05-26

Authorised by: Management Representative  
ecoflo.com.au | info@ecoflo.com.au | PH 1300 138 182