


# Separera *mini*

## Install wall plate Separera Mini

1. Hold the wall plate in place and mark the location. Mark the screw holes for mounting the toilet and wall plate, pre-drill and, depending on the wall material, insert plugs if necessary.



2. Measure or use the included template and mark the holes for the ventilation-pipe and urine drain (depending on model).

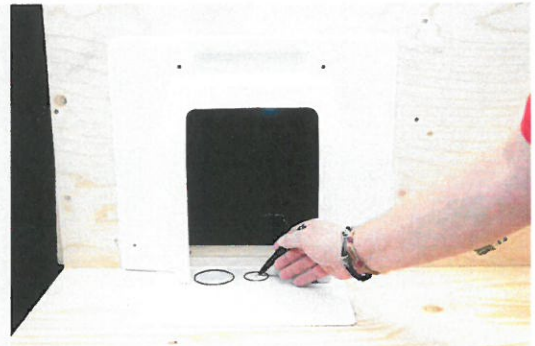


3. Drill holes in the floor for ventilation pipe 60 mm and possibly urine drain 40 mm.



4. Use the screw and mount the cover plate to the wall.



- 5.** Measure the needed pipe length, cut and mount the ventilation pipe on the enclosed pipe angle. Glue the pipe to the bend to ensure it does not come loose.

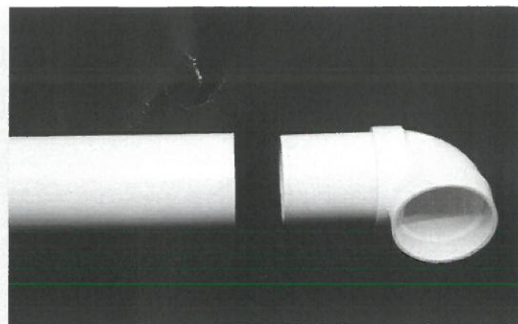

- 6.** Apply silicone to the floor to ensure fixation of the bottom part.




- 7.** Place the lower part in place at the same time as you install the ventilation pipe and urine drain. Screw the lower part so that it follows the wall plate.




- 8.** Put the bottom part into place against the floor and wall plate. Screw the bottom part into the wall with the two screws.



- 9.** Insert inner container (and urine container). Place an environmental bag in the inner container. Put the top part back. Let the silicone harden properly before use.

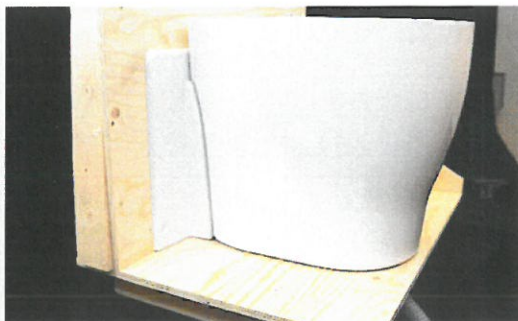

# SwedEco

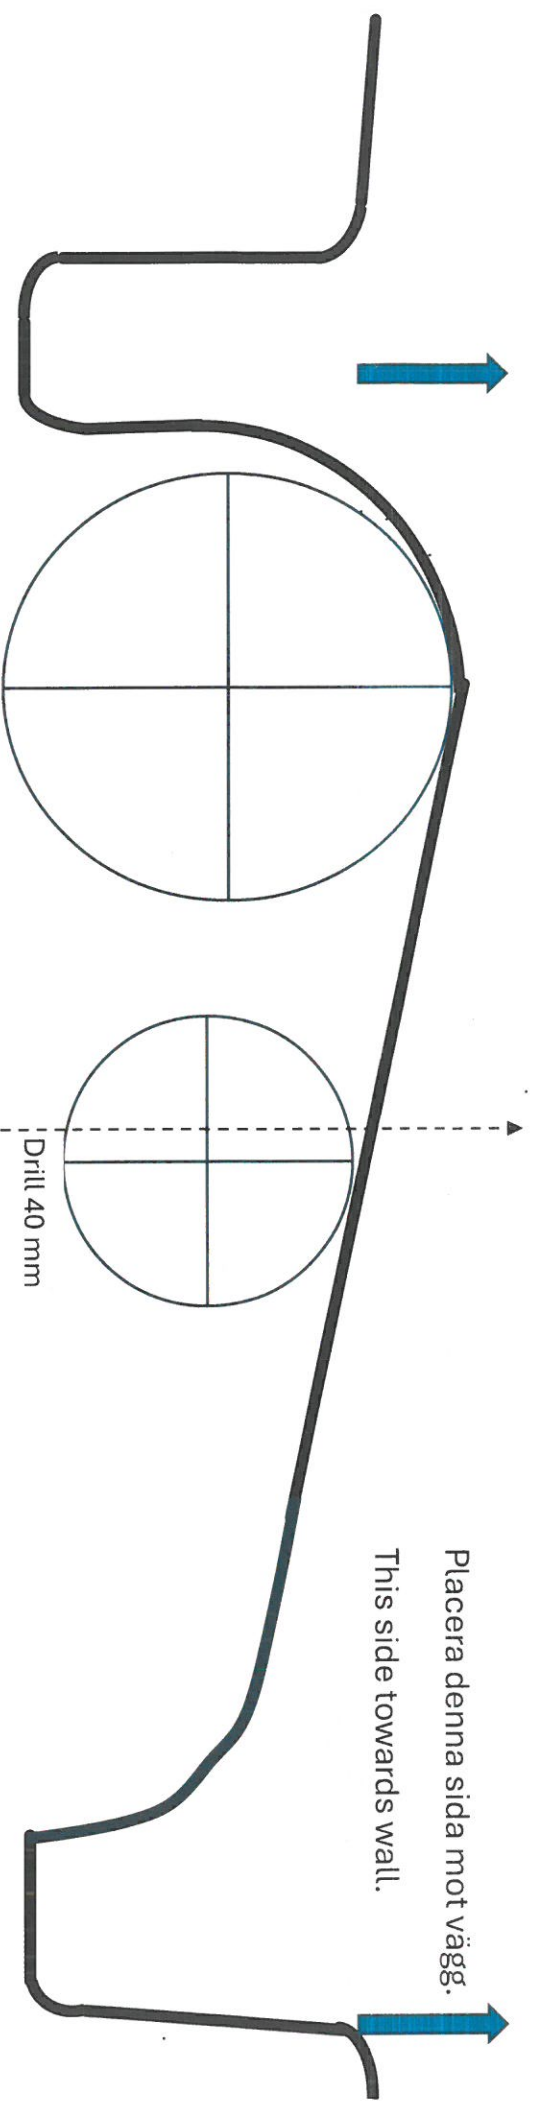

Drill 60 mm  
Ventilation pipe

Drill 40 mm  
Urine drain,  
when needed

Center of toilet  
Centrum toalett

Placera denna sida mot vägg.  
This side towards wall.

### Drilling template floor-mount for wall plate, Separera Mini (both models)