
## Zero Discharge Installation Manual

## 80L Low Volume - Auto Version

ecoflo wastewater management


Suitable for all domestic split system toilets including the: Nature Loo Alectura, Clivus Multrum High Profile, CM8 and CM14

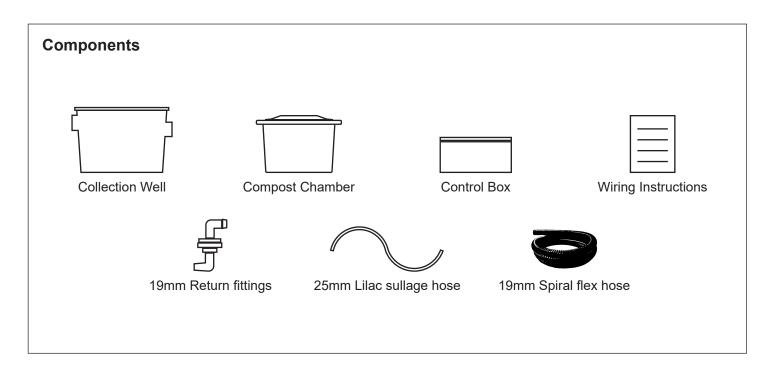


Step 1: Cut a Ø35mm hole into the lid of your 'in-service' compost chamber (if not already pre-installed).


Fit the 19mm return fittings to chamber lid.

Fit the 25mm camlocks to the liquid outlet of your compost chamber.

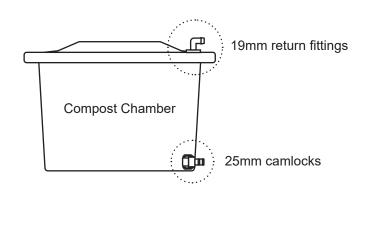



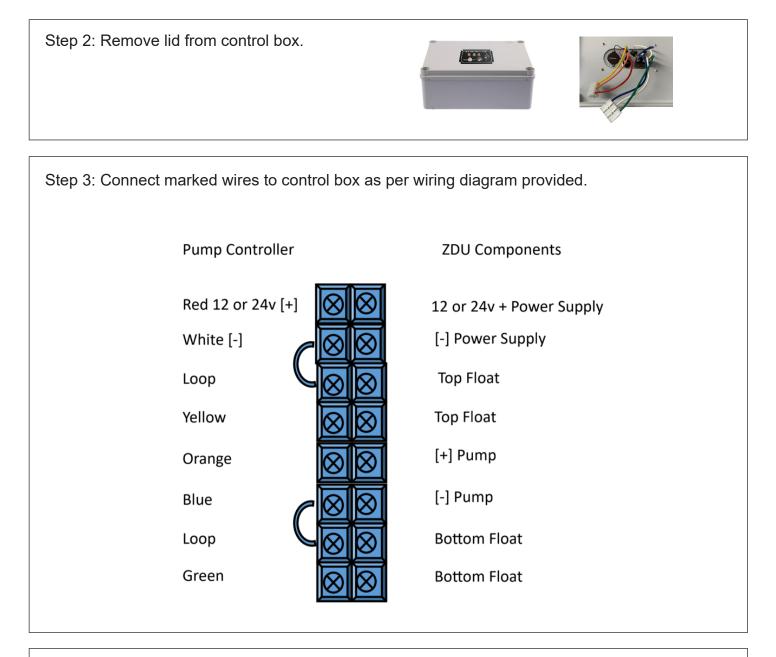

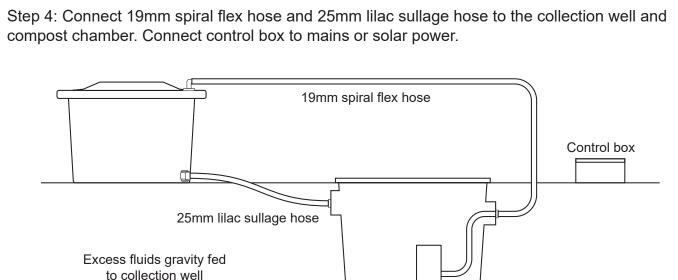

Bilge pump