


Installing the Maximiser kit


Follow the instructions provided in the manual to install the mixing cog and key (STEP 6: ASSEMBLE THE MIXER). Once completed, proceed with the steps below to install the mixing blades for the Maximiser Kit. This kit enables users to optimize their chamber's capacity; extending the time before changing the chamber.

MAXIMISER KIT MIXER RING AND BLADES ASSEMBLY:

1 Insert the steel blades into the ring.

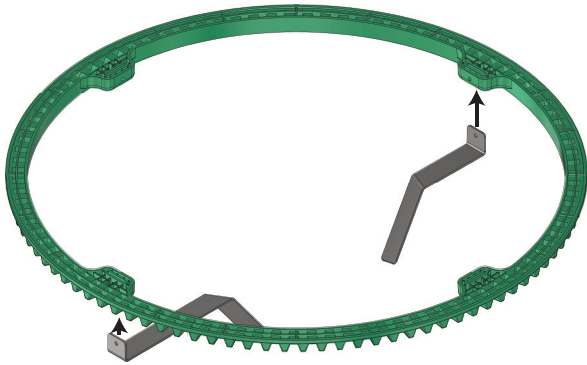


2 Fasten blades to ring with machine screws and square nuts (2x spares are provided).

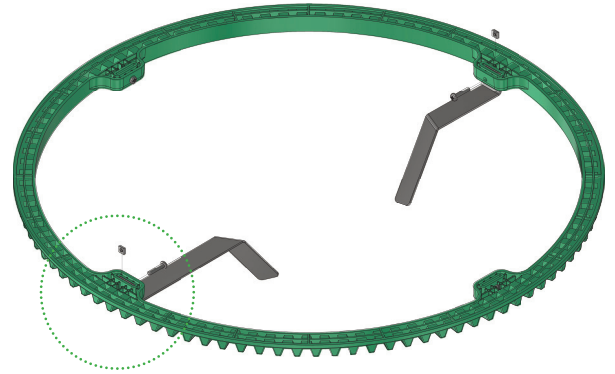

3 Place the assembled mixer into the chamber.



Repeat these steps again for the second set. Return to the Alectura manual to proceed with the installation.

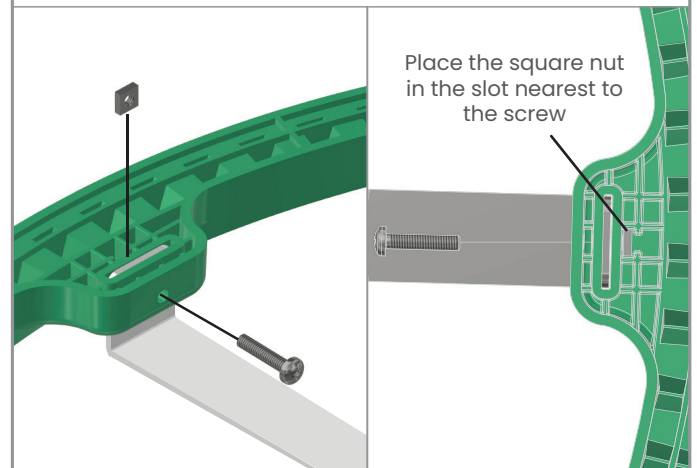

Using the Maximiser kit

Over time the pile will reach the blades, when this occurs add 2L of water to dampen the top of the pile and crank the Maximiser. This will rake the buildup of toilet paper allowing users to continue using the chamber, maximising the volume of the chamber.

